


EXPLOSIVE VIEW OF WD060212070

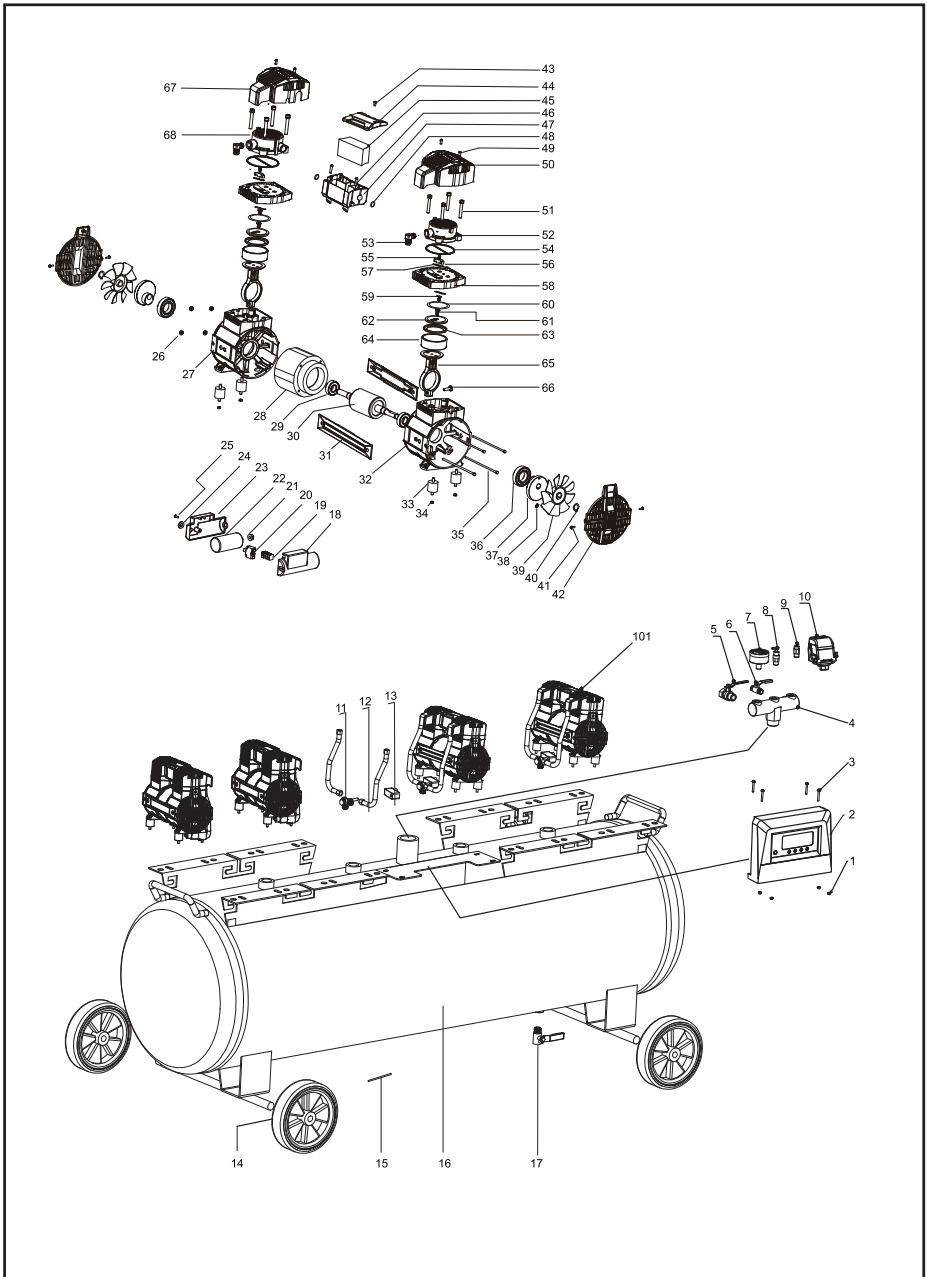

PART LIST OF WD060212070

NO	DESCRIPTION	Q'TY	NO	DESCRIPTION	Q'TY
1	Nut	4	36	Bearing 6006	8
2	Control box assy	1	37	Crank	8
3	Bolt	4	38	Screw	16
4	1/4 Air cock	1	39	Fan	8
5	1/2 Air cock	1	40	Circlip	8
6	Support	1	41	Screw	16
7	Pipe joint	1	42	Crank case cover	8
8	Pressure gauge	1	43	Screw	4
9	Safety valve	1	44	Cover for air filter	4
10	Pressure switch	1	45	Air filter	4
11	Check valve	4	46	Screw	8
12	High pressure pipe	8	47	Box of air filter	4
13	Solenoid valve	4	48	O-ring	8
14	Wheel	4	49	Screw	16
15	Cotter	4	50	Cover of right cylinder head	4
16	Air tank	1	51	Screw	32
17	Drain cock	1	52	Right cylinder head	4
18	Capacitor box	4	53	Pipe joint	8
19	Wiring terminal	4	54	Head gasket	8
20	Over current protector	4	55	Screw	16
21	Nut	4	56	Valve plate press cover	8
22	Capacitor	4	57	Valve plate	16
23	Capacitor box cover	4	58	Valve body	8
24	Nut	4	59	Press plate of valve plate	8
25	Screw	4	60	Seal ring	8
26	Nut	16	61	Screw	8
27	Left crank case	4	62	Press plate of seal cup	8
28	Stator	4	63	Seal cup	8
29	Bearing 6203	8	64	Cylinder	8
30	Rotor	4	65	Connecting rod	8
31	Stop plate	8	66	Bolt	8
32	Right crank case	4	67	Cover of left cylinder head	4
33	Shock pad	16	68	Left cylinder head	4
34	Nut	16			
35	Bolt	16	101	Motor assy	4